


## Control panel

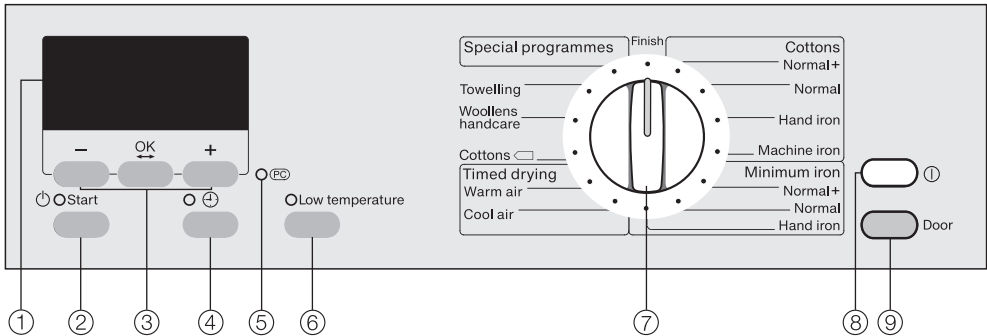

### ① Display

The display lights up when the machine is switched on.

As soon as the dryer is ready to use, the Entry menu appears in the display.

### ② Start button

The indicator light flashes while a programme is being selected, and lights up when the programme starts.

### ③ -, OK, + buttons

See the following pages for more information.


### ④ + button

For selecting Delay start; Time of day display

### ⑤ PC/Optical interface

This is used by Miele service technicians during servicing work for testing purposes.

### ⑥ Low temperature button

For drying delicate fabrics (Care label symbol .

### ⑦ Programme selector

The programme selector can be turned clockwise or anti-clockwise.

### ⑧ On/Off button <sup>Ⓛ</sup>

For switching the dryer on and off. To save energy the dryer will switch off automatically 15 minutes after the end of the programme/anti-crease phase or 15 minutes after the dryer is switched on if it is not operated.

### ⑨ Door button

Opens the machine door independently of the electricity supply.

## Before using for the first time

Before using the machine for the first time, ensure that it is correctly installed and connected. See "Installation and connection".

# Operating the tumble dryer

## Display

The following are shown in the display:

- Programme selection
- Programme duration and the programme start and end time

The following are selected via the display

- *Special programmes*

*Denim*

*Shirts*

*Outerwear*

*Proofing*

*Automatic (if activated)*

*Smoothing*

*Pillows*

*Delicates*

*Basket - Std. temp.*


*Basket - Low temp.*

*Silks handcare*

*Reactivate*

- Delay start
- The Settings menu

Default settings can be altered to adapt the dryer to different requirements. See the end of this booklet for further information.

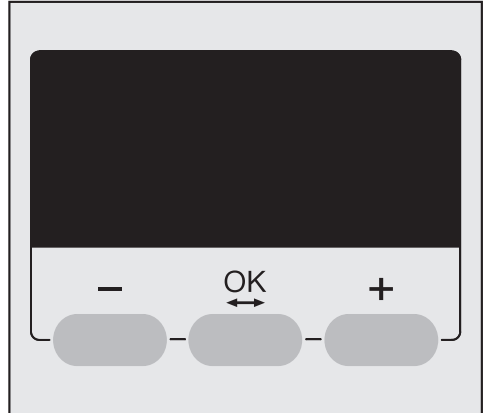

### **-/+ buttons**

For altering the values shown in the display:

- decreases the value or moves the highlighting upwards.
- + increases the value or moves the highlighting downwards.

### **OK button**

For confirming the value selected and choosing the next element.

### **⌚ button**








For selecting Delay start.

You can also press this button during a drying programme to check the estimated programme end time or the current time of day.

# Notes and tips on laundry care

## 1. Sort the laundry

### Garment care label symbols


Drying	
	Normal/higher temperature
	Reduced temperature: Select <i>Low temperature</i> (for delicate textiles)
	Do not tumble dry
Ironing	
	Very hot
	Hot
	Warm
	Do not iron


### Before drying

- Wash heavily soiled items very thoroughly, ensuring that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times.
- Do not put soaking wet items into the tumble dryer. Make sure that your laundry is thoroughly spun before drying.  
The higher the spin, the greater the savings that can be made in energy and time during drying.

- New dark-coloured garments should be washed and dried separately from light-coloured garments the first few times they are washed, to avoid the risk of colours running and discolouring other garments or even the plastic components in the tumble dryer.  
Dark-coloured fibres can also settle on light-coloured garments and vice versa.
- Starched laundry can be dried in the tumble dryer. To achieve the usual finish, double the amount of starch should be used.
- Check the seams of padded or down-filled items to prevent the risk of fillings coming out. These could catch fire in the tumble dryer.
- Tie together textile belts and apron ties to stop them getting tangled.
- Fasten duvet covers etc. to prevent small items from being trapped inside them. Fasten hooks and eyes etc.
- Stitch in or remove loose underwiring from bras.
- Leave jackets open and undo any long zips so that textiles dry evenly.
- For an even drying result, it is important to . . .
  - . . . spin,
  - . . . shake out,
  - . . . and sort items according to fabric type, size, care label and the drying level required.


## 2. Load the tumble dryer

 Using the tumble dryer incorrectly could cause a fire. Read the "Warning and Safety instructions" before using the machine.

 Make sure that objects, e.g. detergent dispensing balls, have been removed from the laundry. They could melt and cause damage to the dryer or the laundry.


- Do not overload the drum. Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.
- To save energy, always observe the maximum load for each programme (see "Programme chart").
- Minimum iron fabrics tend to crease more the greater the load. This is also the case for garments made from very fine weave fabrics, such as shirts or blouses. If necessary, reduce the size of the load for these types of fabrics.

## 3. Select a programme


- On many programmes, different drying levels can be selected depending on individual requirements  
... e.g. *Normal+* for laundry that you want to fold and put away immediately after drying.  
... e.g. *Machine iron* or *Hand iron* if the laundry needs further processing after drying, e.g. machine ironing. See "Programme chart".
- For delicate fabrics with the  care label, select *Low temperature* as well.
- Down-filled garments have linings which have a tendency to shrink, depending on the quality of the item. They can be partially dried using the *Smoothing* programme.
- Pure linen should only be machine dried if specified as suitable by the manufacturer on the care label, as the surface of the fabric may otherwise become rough. They can be partially dried using the *Smoothing* programme.
- Woollens and wool blends tend to become matted and shrink if dried in a tumble dryer. Only dry these fabrics in a *Woollens* programme.
- Loopknit garments (e.g. T-shirts and underwear) tend to shrink depending on their quality. Therefore: Do not over-dry these textiles. When purchasing these garments it is advisable to take their shrinkage properties into account.

# Short instructions


## 1 Sort the laundry


 It is very important to read the "Notes and tips on laundry care" section before proceeding.

## 2 Load the tumble dryer

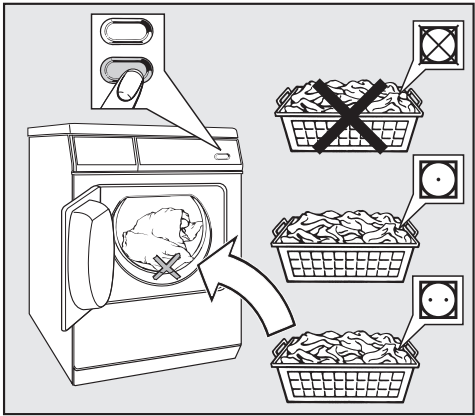

- Open the door.
- Load the drum.

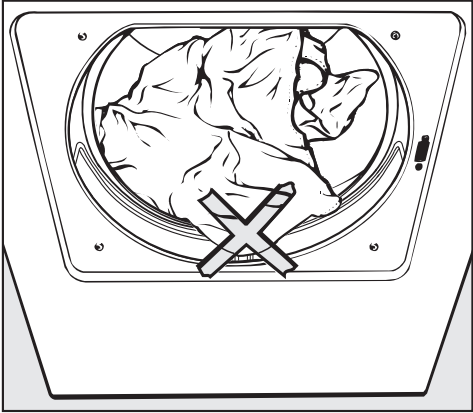

 To avoid damaging your laundry, when shutting the door check that no items of laundry have become trapped in the door opening.


- Shut the door either with a gentle swing, or lean against it and push it shut.

## 3 Select a programme

- Press the *On/Off* button ① briefly to switch on.

Please note:

- If no further selection is made within 15 minutes, the dryer will switch off automatically.
- This does not apply to machines with a payment system.

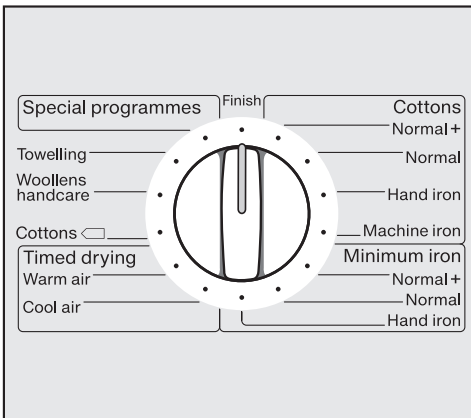

- Turn the selector to the programme you require.

The display will vary according to which programme has been selected.

With the *Cottons* and *Minimum iron* programmes, the drying level is selected with the programme selector.

## To select a *Special programme*

A selection of programmes will appear in the display when you select *Special programmes*.



- Use the + or - button to highlight the programme you want. The arrow ▼ in the display indicates that there are further options.
- Confirm your selection by pressing the **OK** button.

On some Special programmes, the drying level can be altered as follows:



- Use the + or - button to change the drying level.

For the drying level options, see "Programme chart".

## Warm air, Cool air and Basket programmes




- The programme duration can be increased or reduced using the + or - buttons.

# Short instructions

---

## Low temperature button

- For drying particularly sensitive fabrics (care symbol ) , e.g. acrylics, press the *Low temperature* button.

Because the heater rating is reduced for the *Low temperature* setting, clothes dry more slowly thus lengthening drying times.

## button

- See "Delay start".

## Coin operation

If your machine has a payment system, the amount of credit required will appear in the display.

Opening the door or cancelling the programme after it has started may cause loss of credit (depending on how the machine was set up).

## 4 Start the programme

The indicator for the *Start button* will flash as soon as a programme can be started.

- Press the *Start* button.
- *Prog. running* will appear in the display, followed by *Drying* and the programme duration.
- With programmes with drying levels, e.g. *Machine iron*, *Hand iron* etc., the drying level reached will be shown in the display later on.

## Changing the programme sequence

Further information about the following can be found under "Changing the programme sequence":

- Coin box
- Changing a programme once it has started
- Cancelling the current programme
- Adding or removing laundry after a programme has started
- Power cuts
- Time left

## Programme duration/Estimated time left

When a programme is selected, the estimated duration will appear in the display. Please be aware that it is only an estimate!

The following factors all affect the estimated time remaining: residual moisture content after spinning; type of fabric; size of load; room temperature; fluctuations in power supply.

The electronics assess conditions in the dryer and adjust the estimated time remaining for a more accurate reading. Because of this, the time displayed can alter during the course of a programme.

## Before the end of a programme

There is a cooling down phase at the end of the drying sequence: *Cooling down* will appear in the display. The programme will not finish until the cooling down phase has been completed.

There is no cooling down phase at the end of the following programmes: *Woollens handcare*, *Smoothing*.

Do not switch the tumble dryer off before the end of the drying programme.


## 5 Remove the laundry when the programme has finished

*Anti-crease* (if activated) and *Finish* will appear in the display to indicate that the programme has finished.

Please note:

- To avoid creasing, during the anti-crease phase the drum will continue to turn at intervals until the laundry is removed. The anti-crease phase is not activated in the following programmes; *Woollens handcare*, *Basket* programmes.
- The dryer will switch off automatically 15 minutes after the end of a programme/the end of the anti-crease phase.

It is advisable to remove laundry as soon as the programme has finished.

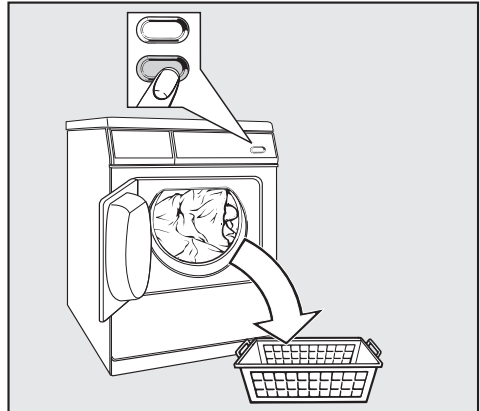

- Open the door.
- Remove everything from the drum.

Check that all items have been removed from the drum. Anything left in the dryer could be damaged by overdrying when it is next used.

The drum lighting will come on when the door is opened. It will go out a few minutes later to save energy.

- Press the *On/Off* button  briefly to switch off the machine.

 

 
 

The display will go out.

- Close the door.

## Maintenance after each drying programme

- Please see "Cleaning and care" for details.

## Basic programmes

<b>Cottons</b>  **		<b>Max. load 6.5 kg*</b>
Use for	Normal wet cotton laundry, as described in <i>Cottons Normal</i> .	
Notes	<ul style="list-style-type: none"> <li>– Items are dried to a "Normal" level only.</li> <li>– <i>Cottons</i>  is the most energy-efficient programme for drying normal wet cotton laundry.</li> </ul>	
<b>Cottons</b>		<b>max. 6.5 kg*</b>
<b>Normal+, Normal</b>		
Use for	<ul style="list-style-type: none"> <li>– Single and multi-layered cotton fabrics such as:</li> <li>– Towelling, T-shirts, underwear, flannelette bed linen and baby clothes.</li> <li>– Workwear, jackets, cotton blankets, aprons, face flannels, tea towels, bed linen, towels, table linen that can be washed hot, overalls.</li> </ul>	
Note	– Do not overdry loopknit fabrics (e.g. T-shirts, underwear, baby clothes), as they have a tendency to shrink.	
Low temperature	Select for fabrics with the  symbol.	
<b>Hand iron, Machine iron</b>		
Use for	<ul style="list-style-type: none"> <li>– Cotton or linen fabrics</li> <li>– Table linen, bed linen, starched laundry.</li> </ul>	
Note	– To prevent laundry from drying out, it should be rolled up until you are ready for ironing.	
Low temperature	Select for fabrics with the  symbol.	
<b>Minimum iron</b>		<b>max. 3.5 kg*</b>
<b>Normal+, Normal, Hand iron</b>		
Use for	<ul style="list-style-type: none"> <li>– Minimum iron cotton, synthetic and mixed fibre fabric</li> <li>– Workwear, overalls, pullovers, dresses, trousers, table linen</li> </ul>	
Low temperature	Select for fabrics with the  symbol.	

\* Weight of dry items

\*\* Note for test institutes:

Test programme in accordance with regulation 392/2012/EU measured according to EN 61121

# Programme chart

<b>Towelling</b>		<b>max. 6.5 kg*</b>
<b>Normal+</b>		
Use for	<ul style="list-style-type: none"> <li>– Large quantities of single-layer and multi-layer towelling items.</li> <li>– Towels, dressing gowns, face flannels, towelling bedding.</li> </ul>	
<b>Woollens handcare</b>		<b>max. 2.5 kg*</b>
Use for	Woollen garments.	
Note	<ul style="list-style-type: none"> <li>– Items are dried and aired briefly.</li> <li>– Remove garments as soon as the programme has finished and leave to finish drying at room temperature.</li> </ul>	
<b>Timed drying, warm air (15-60 minutes**)</b>		<b>max. 6.5 kg*</b>
Use for	<ul style="list-style-type: none"> <li>– Multi-layered fabrics whose layers have different drying characteristics,</li> <li>– Voluminous items, e.g. jackets, pillows.</li> <li>– For drying individual items.</li> <li>– Bath towels, swimwear, tea-towels.</li> </ul>	
Note	– Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time.	
Low temperature	Select for fabrics with the ☐ symbol.	
<b>Timed drying, cool air (10-120 minutes**)</b>		<b>max. 6.5 kg*</b>
Use for	– Any item which only needs airing.	

\* Weight of dry items

\*\* The upper and lower limits of the programme duration can be changed by a Service technician.

## Special programmes

<b>Denim</b>		<b>max. 3.5 kg*</b>
<b>Normal, Hand iron <math>\Delta</math></b>		
Use for	– Denim garments, e.g. jeans, jackets, skirts, shirts.	
<b>Shirts</b>		<b>max. 2.5 kg*</b>
<b>Normal, Hand iron <math>\Delta</math></b>		
Use for	– Shirts and blouses.	
<b>Outerwear</b>		<b>max. 3.5 kg*</b>
<b>Normal, Hand iron <math>\Delta</math></b>		
Use for	– Outerwear which is suitable for drying in a tumble dryer.	
<b>Proofing</b>		<b>max. 2.5 kg*</b>
<b>Normal</b>		
Use for	– Microfibre fabrics, skiwear, fine, closeweave cotton garments (poplin) or tablecloths which are suitable for drying in a tumble dryer and have been treated to provide a water and dirt resistant finish.	
Note	<ul style="list-style-type: none"> <li>– This programme includes a proofing fixing phase.</li> <li>– Only use proofing agents containing fluorochemical compounds which are stated by the manufacturer as being "suitable for use on membrane textiles". Do not dry items which have been treated with proofing agents containing paraffin. Fire hazard!</li> </ul>	


\* Weight of dry laundry

## Programme chart

<b>Standard pillows</b>		<b>max. 2.5 kg*</b>
<b>Normal</b>		
Use for	<ul style="list-style-type: none"> <li>– Feather or down pillows.</li> <li>– Quantity: 2 pillows 80x80 cm</li> </ul>	
<b>Delicates</b>		<b>max. 4 kg*</b>
<b>Normal+, Normal, Hand iron <math>\Delta</math></b>		
Use for	<ul style="list-style-type: none"> <li>– Delicate cotton, synthetic and mixed fibre fabrics</li> <li>– Thin pullovers, dresses, trousers, overalls, table cloths, shirts, blouses.</li> <li>– Lingerie and appliquéd fabrics.</li> </ul>	
Important	<ul style="list-style-type: none"> <li>– Low creasing.</li> </ul>	

\*Weight of dry items

# Programme chart
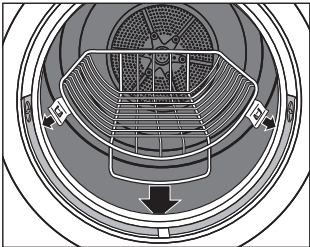
<b>Basket programmes (20-90 min)</b>	
Note	<ul style="list-style-type: none"> <li>– The drying basket (optional accessory) must be in place when items are dried or aired using this programme.</li> <li>– To prevent the risk of damage when the drum rotates, do not place large items which could come into contact with the drum or drum ribs in the drying basket (e.g. knee length boots, large bags or rucksacks).</li> <li>– Sleeves, belts and ties should be folded in or secured so that they are fully contained within the drying basket.</li> <li>– Use this programme to dry items which are suitable for drying in a tumble dryer but which are not suitable for drying using mechanical action.</li> <li>– It is essential to observe the operating instructions for the drying basket.</li> </ul>
	
Use for	– See the operating instructions supplied with the drying basket.
<b>Basket Std. temp. (20-90 min) max. load in the basket 3 kg</b>	
– For thermally stable textiles / items	
<b>Basket - Low temp. (20-90 min) max. load in the basket 3 kg</b>	
– For thermally sensitive textiles / items	
<b>Silks handcare max. 1.5 kg*</b>	
Use for	– Silks, e.g. blouses and shirts.
Important	<ul style="list-style-type: none"> <li>– Smooths out creasing.</li> <li>– Remove garments as soon as the programme has finished and leave to finish drying at room temperature.</li> </ul>
<b>Reactivate max. 2.5 kg*</b>	
<b>Normal</b>	
Use for	– Outerwear which is suitable for drying in a tumble dryer.
Note	– Makes the fibres more water-repellant.

\*Weight of dry items

# Changing the programme sequence

## Payment system

Opening the door or cancelling the programme after it has started may cause loss of credit (depending on how the machine was set up\*).

\* A Miele service technician can re-set the payment system so that programming changes can be made within a specified time period.

## Changing a programme once it has started

You cannot change to another programme once a programme has started (this prevents unintentional alterations). If the programme selector is altered, the words *Programme cannot be changed* appear if the selector is not turned back to the original programme.

You will need to cancel the current programme before you can select a new one.


## Cancelling the current programme

- Turn the programme selector to *Finish*.

When *Finish* appears in the display, this shows that the programme has been cancelled.

- Open the door.
- Close the door.
- Select a new programme.
- Press the *Start* button.

## Adding or removing laundry after a programme has started

 The laundry, the drum and the back of the machine all become very hot during operation. Take care when in the vicinity of the machine, when opening the door and handling freshly dried laundry. Danger of burning.

- Press the *Door* button.
- Open the door.
- Add or remove items as required.
- Close the door.
- Press the *Start* button.

## Power cuts

- If the dryer is switched off during a drying programme or there has been a power cut:
  - When the power is restored and/or the machine is switched on again, confirm with **OK** and start the programme again.

## Time remaining

The time left shown in the display may now vary from the actual drying time.